

# INSTALLATION MANUAL




## RC-5 Interface

The RC-5 Interface allows easy integration of conventional infrared systems with stereo systems using the RC-5 infrared protocol.

### INSTALLATION

With the power off to both the infrared connector block and the receiver, connect the RC-5 interface following the wiring diagram below. Once all connections are made. Power can be restored to all the units.

### WIRING DIAGRAM

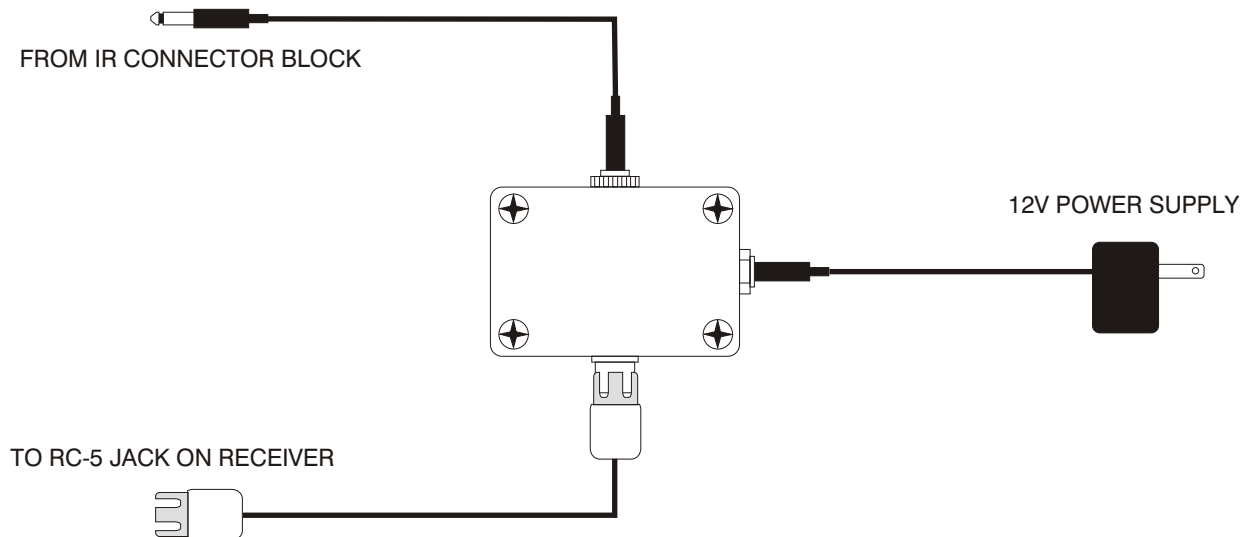

© 2004 - 11/23/04

### WARRANTY

Your AUDIOPLEX TECHNOLOGY® RC-5 Interface is covered by a Lifetime Warranty against defects in workmanship and materials. Any defects will be remedied without charge for labor or parts.

Damage incurred by shipping or accident is not considered to be a defect, and not covered by this warranty. AUDIOPLEX TECHNOLOGY® is not responsible for defective operation caused by abuse or by modification or service by an unauthorized person or agency.

The unit must be properly installed and operated according to instructions for the warranty to apply. Any necessary servicing must be done by AUDIOPLEX TECHNOLOGY®. The products must be returned expenses prepaid, with written authorization from the company. The unit must be shipped with the proof of purchase and in original carton and packing material to avoid damage.

**AUDIOPLEX TECHNOLOGY®**